


# INTERACTIVE

APRIL, 1982

ISSUE NO. 8

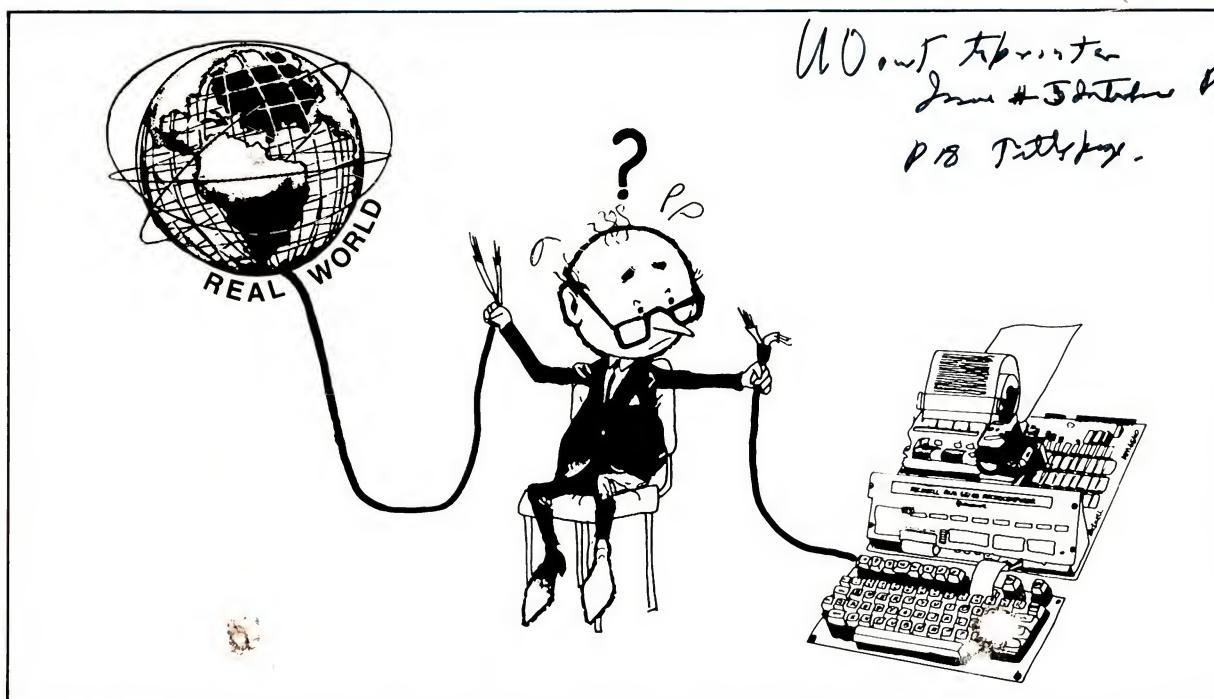

If you are trying to interface your computer to the REAL WORLD, then you know how different that world is from our familiar digital world. We've included an article on

page 3 of this issue as an aid in hooking up these two seemingly diverse worlds. We hope to offer more assistance in this area in future issues . . . with your help.

- |  |  |
|--|--|
| <b>2 Letters to the Editor</b>         | <b>13 Macros for the Forth Assembler</b>   |
| <b>3 Real World Interface</b>          | <b>14 Command String Creation</b>          |
| <b>4 System Spotlight</b>              | <b>16 Q &amp; A for the R6551 ACIA</b>     |
| <b>5 Error Location in Forth</b>       | <b>16 Verifying a Successful Recording</b> |
| <b>6 MX80 &amp; RS-232</b>             | <b>18 Title Page Printer</b>               |
| <b>7 Cassette Recorder Interfacing</b> | <b>19 Designer's Courses</b>               |
| <b>7 DILINK Dilemma</b>                | <b>19 AIM 65 Program Exchange</b>          |
| <b>8 I/O Debug on AIM 65/40</b>        | <b>23 A New Case for AIM 65</b>            |
| <b>10 Adventure for AIM 65</b>         | <b>24 AIM 65 Spare Parts List</b>          |
| <b>12 Board Level Seminars</b>         |  |

PLEASE NOTE: If you received this issue through the mail—you are on the INTERACTIVE mailing list and will continue to receive issues of this publication as they are issued.



Rockwell International

where science gets down to business

## EDITOR'S CORNER

### GOOD VIBES

I've received ALOT of favorable feedback concerning our special FORTH issue (#7).

One thing I've noticed about FORTH is that its users are as enthusiastic as early 6502 users. I partially credit this enthusiasm for the popularity the 6502 enjoys to this day. It would be great if FORTH were to become as popular in several years.

### CHANGE OF ADDRESS

When you inform us of a change of address PLEASE give us your old address as well as your new address.

### CORRECTIONS TO ISSUE #7

page 12—in the schematic a 1N4001 diode needs to be added so that the cathode is connected to pin 21 of the EPROM socket and the anode is connected to pin 24 of the EPROM socket. Also, a connection has to be made from PB7 of the R6522 to pin 20 of the EPROM socket.

### INSTANT PASCAL MANUAL IN GERMAN

I just received word that the AIM 65 Instant Pascal manual has been translated into the German language. It is available for DM30 from Hans-Joachim Regge, Fesenfeld 57, 2800 Bremen 1, West Germany (Telephone 0421-71114 abends)

### MAIL ORDER

I just received a catalog from Mouser Electronics (11433 Woodside Ave., Santee, CA 92071) who lists all Rockwell's device and system level products. They say that they stock everything they list. Their phone number is 714-449-2222.

---

**ERIC C. REHNKE—EDITOR**

---

All subscription correspondence and articles should be sent to:

**EDITOR, INTERACTIVE  
ROCKWELL INTERNATIONAL  
P.O. BOX "C"  
4311 JAMBOREE RD.  
NEWPORT BEACH, CA 92660**

COPYRIGHT 1982 ROCKWELL INTERNATIONAL CORPORATION

Rockwell does not assume any liability arising out of the application or use of any products, circuit, or software described herein, neither does it convey any license under its patent rights nor the patent rights of others. Rockwell further reserves the right to make changes in any products herein without notice.

### NEW LITERATURE AVAILABLE

The prices indicated for the following new literature is for customers in the U.S. and Canada. All others need to add \$2.00 per book (\$1.00 per reference card or schematic) for shipping and handling. ALL PAYMENTS must be made in U.S. funds drawn on a U.S. bank (or by U.S. Postal Money Order). U.S. residents should add their appropriate state sales tax.

#### Order

Order No.	Document	Price
283	AIM 65 FORTH Reference Card	\$2.00
2100	AIM 65/40 8K Basic Reference Card	\$2.00
289	AIM 65/40 System Summary Booklet	\$2.00
280	AIM 65/40 System User's Manual	\$15.00
297	AIM 65/40 Assembler User's Manual	\$10.00
299	AIM 65/40 Basic User's Manual	\$10.00
262	I/O ROM Program Listing (AIM 65/40)	\$10.00
291	40 Character Display User's Manual (AIM 65/40)	\$10.00
292	Graphics Printer User's Manual (AIM 65/40)	\$10.00
288	Monitor/Editor Program Listing (AIM 65/40)	\$10.00
290	AIM 65/40 SBC Module Schematic	\$2.00
D78	AIM 65/40 Microcomputer Data Sheet	No Charge
RM23	AIM 65/40 Adapter Cable and Buffer Module Data Sheet	No Charge

### COMPAS FOUND

After my little notice in the last issue about having trouble locating COMPAS MICROSYSTEMS, I received several phone calls and letters. Apparently, COMPAS has been purchased by the IMPACT SERVICES DIVISION of PIONEER HI-BRED INTERNATIONAL. According to a copy of an earlier letter I received, most of the system level products will be, or have been, phased out. For more information, the phone number of IMPACT SERVICES DIVISION is 515-270-3201

## LETTERS TO THE EDITOR

Dear Editor,

I would like to thank Ken Fullbrook and Michael Chinn for their suggestions on the use of the Editor with BASIC. I have made good use of them. My INPUTs to BASIC consist of 2 and 3 fields, so I use special "flag" inputs when I want BASIC to shift gears. Also, the Editor will be restored to its top line if you PEEK(227) and 228 and POKE to 225 and 226 respectively.

C. M. Shaw  
169 Rainbow Dr. NW  
Ft. Walton Beach, FL 32548

(Continued on page 20)

## REAL WORLD INTERFACE


**Paul Toomey**  
**Applications Engr.**  
**Analog Devices B.V.**  
**Raheen Industrial Estate**  
**Limerick, Ireland**

A common task for microcomputers such as the AIM-65 is monitoring analog input signals from transducers. This brief note describes an easily constructed 8-channel analog input unit suitable for direct connection to the AIM-65 expansion port.

The heart of the analog input unit is a microprocessor compatible 8-channel, 8-bit CMOS data acquisition I.C. made by Analog Devices. The device contains an 8-bit successive approximation A/D converter, an 8-channel multiplexer and an 8-bit dual port RAM. It continually scans and converts 8 analog inputs in a way that is totally transparent to the microprocessor. The user simply treats the device as 8 bytes of read only memory, each byte contains the conversion data for one analog input channel.

All of the control signals required are available at the AIM-65 J3 expansion port. The spare chip select  $\overline{CS8}$  is gated with  $\overline{R/W}$  to select the AD7581. Address lines A0, A1 and A2 address one of the 8 locations within the AD7581 corresponding to the 8 analog input channels. When selected the AD7581 puts the conversion data for the addressed channel onto the data bus by enabling its three-state data outputs. Thus the AD7581 resides at memory locations 8000H to 8007H or in decimal 32768 to 32775. The rate at which the analog inputs are multiplexed and

(Continued on page 19)

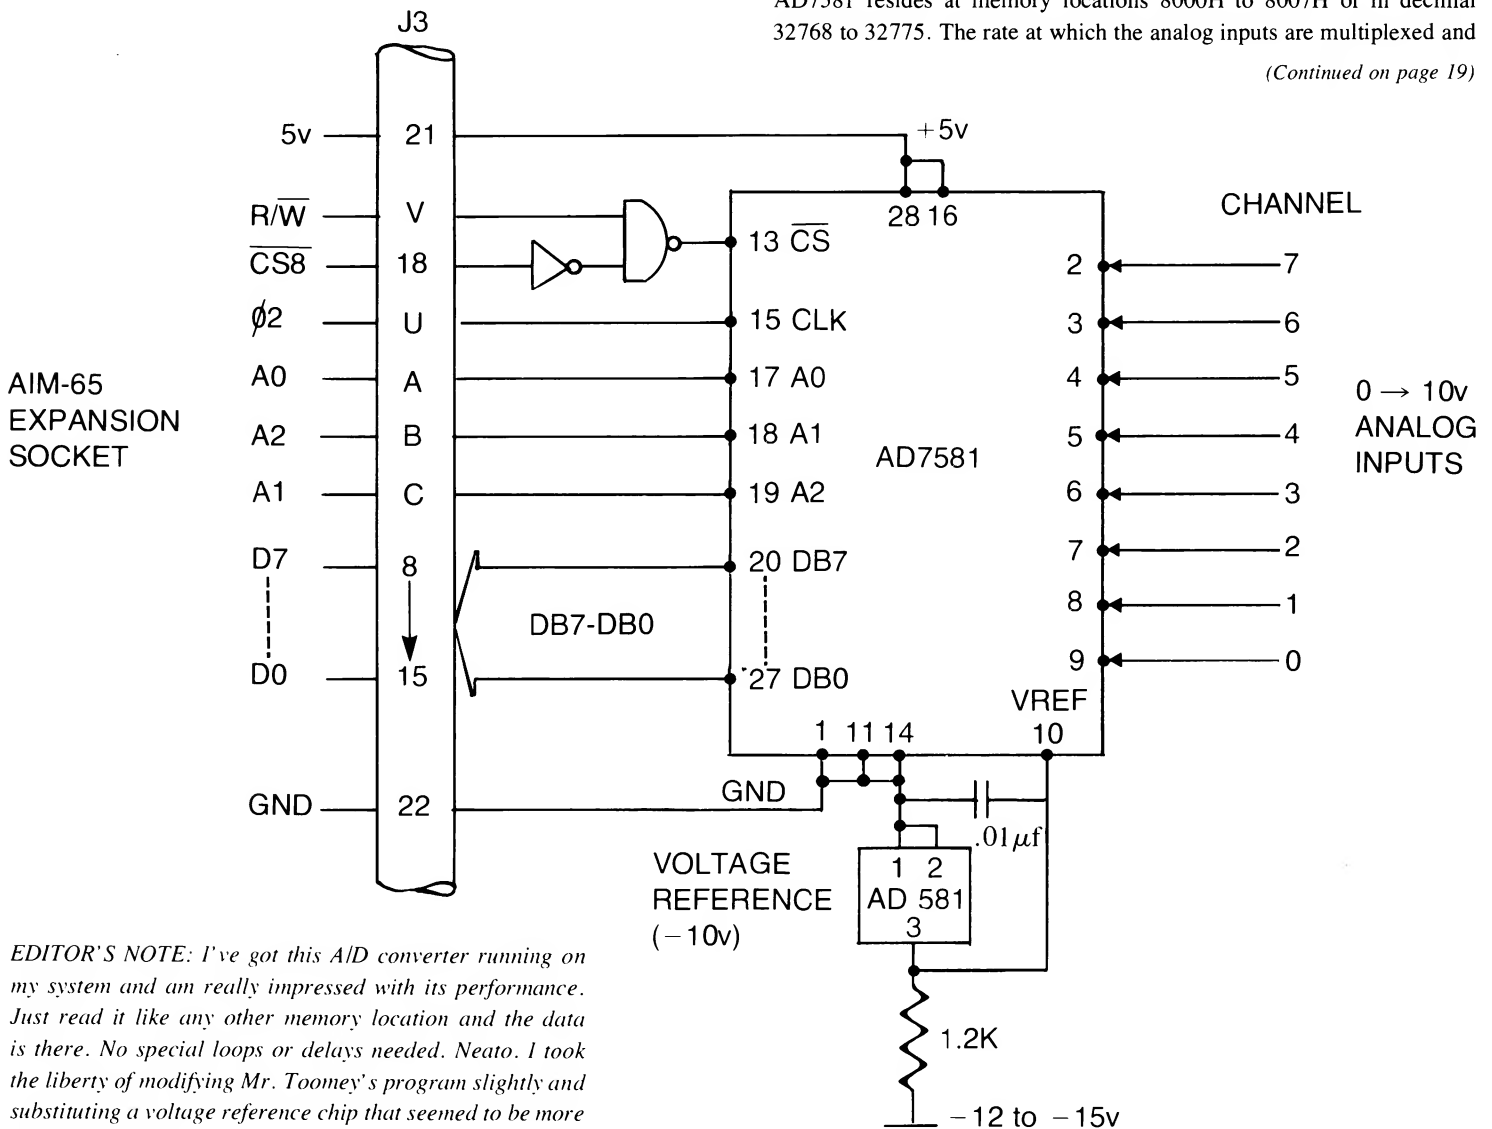

*EDITOR'S NOTE: I've got this A/D converter running on my system and am really impressed with its performance. Just read it like any other memory location and the data is there. No special loops or delays needed. Neato. I took the liberty of modifying Mr. Toomey's program slightly and substituting a voltage reference chip that seemed to be more readily available.*

## SYSTEM SPOTLIGHT

### AIM 65 BASED SYSTEM PROVIDES REAL TIME CONTROL WITH 32 I/O CHANNELS

Micro Interfaces Inc., Minneapolis, Minnesota, has an AIM 65 based Microcomputer Control System (MCS) and some associated hardware that might be of interest to INTERACTIVE readers.

MI's MCS has 16 input and 16 output channels, rated at 30 VDC at 3 amps. Each of the I/O channels are isolated from the AIM 65 signals and are noise suppressed.

Originally developed for behavioral research, the MCS's first application was controlling feeder and drinking devices, stimulus lights and recorder pens, while receiving inputs from lip-contact drinkometers and levers in Rhesus monkey cages.

However, the system can provide real time control, using BASIC language, for industrial processing, to turn on and off or pulse solenoids and lights, to record from DC switches, etc.

The MCS is made up of an AIM 65 microcomputer (A65-415, 4K RAM plus BASIC) plus three boards and a software ROM, housed in a single enclosure and weighing only twelve pounds.

The main addition is the MI-DCI interface board, with the 16 inputs and 16 outputs. An MI-J1 board provides audio cassette jacks, an RS232C or 20 ma TTY serial port, and internal connections to the DCI. An MI-J3 board allows for system expansion with the addition of memory boards, floppy disk drives and other devices.

An additional ROM allows real time programming of events and plugs into the assembler socket on the AIM 65. The software is an Interrupt Service Routine (ISR) which provides 10 millisecond resolution, an interrupt driven clock and numerous sub-routines that can be called by the user's BASIC program.

When coupled with all of the AIM 65 features—keyboard, printer, display, BASIC language, ROM, RAM, proven reliability—the MI additions make a very versatile control system. The system can even be expanded with the Rockwell RM series of microcomputer boards.

Micro Interfaces also offers a test box (MI-TB) with 16 outputs (LEDs) and 16 inputs (pushbutton switches) and interface cable with connector. This can be used to test programs and as a learning aid.


The boards MI designed to convert the AIM 65 into a control system may have some interest in their own right, particularly the MI-J1. This card connects to the J1 connector on the AIM 65 and provides two audio jacks, a 24-pin connector for the microcomputer's VIA signals, and an RS232C or 20 ma TTY serial port.

Current pricing has the MCS, including power supplies, the AIM 65, the three added boards and software ROM in an enclosure, at \$1950. The MI-TB test box is \$150. The MI-J1 board, fully assembled and tested is \$29.95 (bare board is \$13.95).

For more information, contact Micro Interfaces Inc., PO Box 14520, Minneapolis MN 55414. Or, call (612) 426-4603. We obtained our information from Peter Santi, MI's president.

Just to be sure, we want to add that Rockwell International has no connection with Micro Interfaces, and is not making claims or offering warranties for any MI products. We are trying to pass on to you information on AIM 65 applications that might prove of interest to INTERACTIVE readers.

*Micro Interface's AIM 65 based Microcomputer Control System (MCS) in its enclosure, right, and the MI-TB test box, left. The MCS provides a 32 channel real time control system. The test box provides a matching 32 channels.*

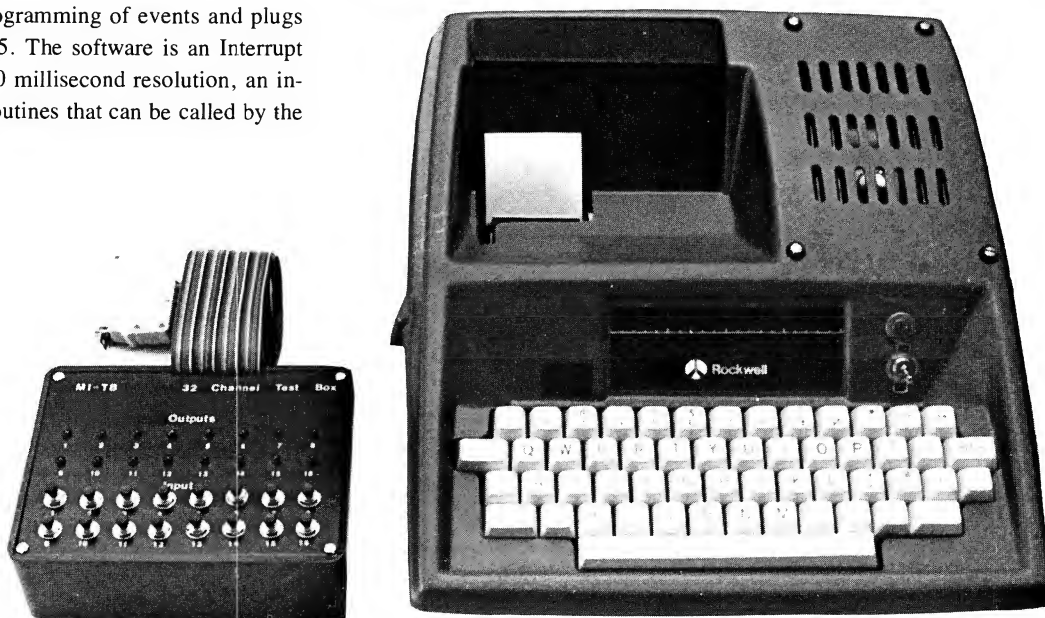

## ERROR LOCATION IN FORTH

**Stephen McHenry**  
**16783 Beach Blvd.**  
**Suite 303**  
**Huntington Beach, CA 92647**

As a development system, FORTH offers many advantages to AIM-65 users. However, some of FORTH's error messages are somewhat terse. This is especially true when an undefined reference is found in the program source. FORTH's response to this type of error is simply

XYZ ?

with no additional assistance to help the user locate the error. For small programs, this is not usually a problem. However, when the program under development is reasonably large, locating the source of this error can be particularly frustrating since no source listing is generated giving the programmer the context of the word in error and no other clues are given.

However, if the source of the program is located in the memory of the AIM-65, one might reasonably expect that there should be a way of determining how to access the location where the error occurred. In addition, since AIM-65 FORTH uses the editor's line pointer as the position to start compilation, one might also reasonably expect that this pointer is also used to "remember" the "current" line during compilation. Thus, the line pointer would point to the vicinity of the error when compilation stops. This is, in fact, exactly what happens. Unfortunately, the only reentry command provided for the editor is "T", which automatically positions the line pointer to the top of the source program. What is needed is some way to access this information in a meaningful way before it is destroyed. There are two ways to do this.

Both methods involve adding a new word as the first word in the source program. This word is compiled, not to be referenced by any other words in the program, but rather to be invoked when compilation fails to aid in determining where the error occurred. When program development is complete, this word can be removed to make the program smaller.

The first word prints several lines of context surrounding the error and prints an arrow (<<-- ) at the end of the line containing the error. This is usually sufficient to locate the error in the source. The first line and last line printed may only be partial lines (the word could be changed to print only complete lines).

The actual source text for the word follows:

```

HEX
: WHERE
CR

```

```

00DF @
30 -30 (SIZE OF CONTEXT)
DO
  I -1 =
IF (Time to Print Arrow?)
  20 EMIT
  3C EMIT
  3C EMIT
  2D EMIT
  2D EMIT
THEN
DUP (THE ADDRESS OF THE LINE POINTER)
I + (ADD THE DISPLACEMENT)
C@ (GET THE CHARACTER)
EMIT
LOOP
DROP (THE ADDR OF THE LINE POINTER)
CR ;

```

Once the context of the error is known, it is usually easy to locate the actual problem. The programmer can then exit from FORTH, enter the editor using the "T" command and quickly position to the point of error.

The word described above has proven itself useful in assisting programmers in quickly locating errors in large programs. However, some work is still required to leave FORTH, enter the editor and position to the error. It would be more desirable to actually do all of this with one word. The second word described actually exits FORTH and enters the editor at the point of the error (more specifically, at the line after the error).

The actual format of the word follows:

```

HEX
CODE EDIT
EA24 JSR,
F7B9 JMP,
END-CODE

```

A clever observer will note that this is the same code that is executed when the "T" command is entered, minus the part which resets the editor's line pointer to the first line.

As soon as compilation halts due to an error, EDIT may be entered to return control to the editor. A "U" command should be entered to position to the line that actually caused the error. The error may then be corrected and the program recompiled.


Of the two, the second word seems much more practical than the first. It is shorter, faster and more closely accomplishes exactly what is desired, entering the editor at the exact point of the error. However, both words have been included here for the sake of completeness and in the remote event that the second word cannot be used in some particular application.

## MX80 & RS232

V.G.O.  
Xerox Corp.

I found the program UOUT described in the issue No. 5 of INTERACTIVE to be very useful. However, I wanted to interface the EPSON MX-80 printer to AIM-65 and I had trouble with the printer being too slow to respond to a rather high stream of data sent to it by the AIM. The AIM must be able to detect when the printer is ready to accept data and to terminate the transmission when the printer is busy.

Here is how I solved this problem:

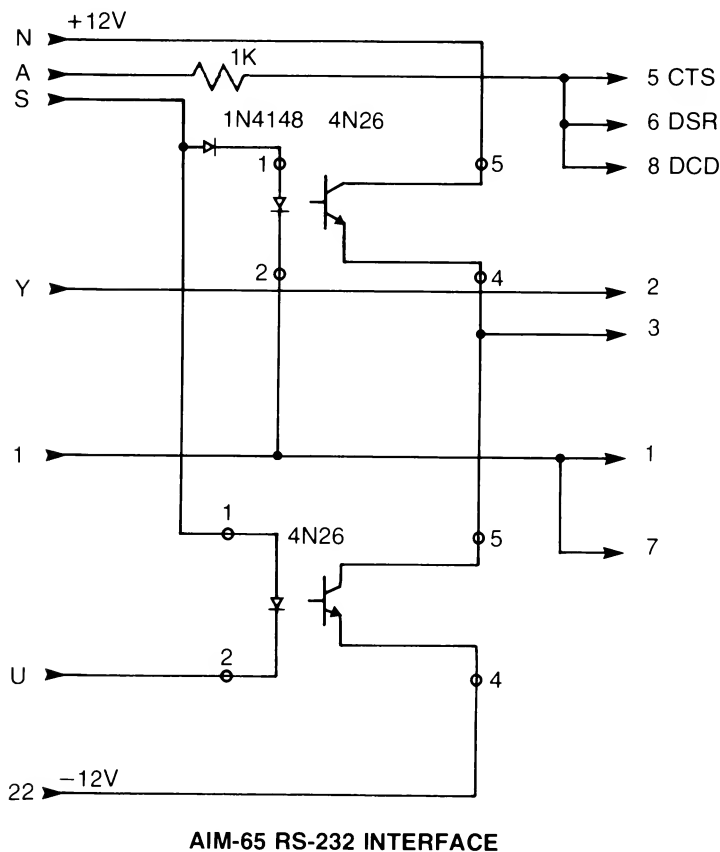

Instead of using another handshake line, the RXD line, pin 2 on the RS-232 connector could be used, since the printer does not have anything to send to AIM, anyway.

Pin 2 should be connected to the DTR line of the printer (11 and 20 on EPSON), and it will be tested for printer being READY. The UOUT program should be modified in such a way that DTR will be tested before the character is sent to the printer. If the printer is busy it will loop on the test. The addition to the program UOUT is shown on the enclosed listing.

If you tried the AIM RS-232 interface described in the Rockwell application note No. 230: RS-232 Interface for AIM 65, you might be surprised to discover that the implementation using the opto-coupler does not work for the baud rate higher than 1200. The same apply to the interface described in the issue No. 5 titled: EASY RS-232C.

The reason for this is that in the both bases a resistor is used as a pull-up for the transistor in the opto-coupler and the transition from -12V to +12V is slow.

If you still want to use the opto-coupler and would like to use the baud rate up to 9600 the remedy is shown on the figure.

I hope the readers will find some use for these items.

2000		OUTTY	=\$EEAB
2000		CR	=\$0D
2000		LF	=\$0A
2000		NULL	=\$00
2000		DRB	=\$AB00
2000		UOUT	=\$10A
2000		*	=UOUT
010A	DO 2F	.WORD	START
010C		*	=\$2FD0
2FD0		;WAIT FOR DTR TO GO	
2FD0		; HIGH ON PIN 2	
2FD0	90 19	START	BCC RETRN
2FD2	2C 00 AB	STUS	BIT DRB
2FD5	70 FB		BVS STUS
2FD7	68		PLA
2FD8	C9 0D		CMP #CR
2FDA	D0 0C		BNE NOTCR
2FDC	A9 0A		LDA #LF
2FDE	20 AB EE		JSR OUTTY
2FE1	A9 0D		LDA #CR
2FE3	20 AB EE		JSR OUTTY
2FE6	A9 00		LDA #NULL
2FE8	20 AB EE	NOTCR	JSR OUTTY
2FEB	60	RETRN	RTS
2FEC			.END

## CASSETTE RECORDER INTERFACING

**Edward B. Hale**  
**Assoc. Prof.**  
**102 Physics Bldg.**  
**University of Miss.**  
**Rolla, Missouri 65401**

The AIM 65 does not always interface well with cassette recorders, especially with El Cheapo (<\$30) brands, but also with some more expensive models. For example, our El Cheapo recorder caused many error messages when the AIM was trying to read back the tape. Apparently, others are also experiencing problems as mentioned in INTERACTIVE, Issue No. 4. In solving our play back problem, several items of possible interest to readers of INTERACTIVE were discovered and, of greater importance, a simple circuit modification can substantially reduce data transfer errors and other recorder problems.

The input to the recorder (MIC) is approximately a square wave of frequency 1200 or 2400 Hz as described in Appendix F of the User's Guide. However, the output from the recorder (EAR) bears no resemblance to a square wave! This is basically because the recorder was not designed to transmit the many Fourier frequencies in a square wave. For example, our G.E. recorder transmits *only* the fundamental frequency of the 2400 Hz signal\*. (The 7200 Hz and higher harmonic frequencies are all severely attenuated even when the treble is at its highest.) Unfortunately, our El Cheapo recorder had a better high frequency response and transmitted 7200 Hz. The transmission of these higher frequencies caused an undesirable ripple structure in the output signal. Occasionally, if this structure becomes noisy, it can be interpreted by the AIM circuitry as an extraneous (error) pulse. Unfortunately, no easy way was found to reshape the output signal to avoid this problem. However, a simple solution to the problem was found.

\*This poor frequency response may be why the G.E. recorder works well.

The solution was based on reshaping the input signal from the AIM into a sinusoidal-like wave. The recorder handled without large distortion sinusoidal waves of both 1200 and 2400 Hz. These waves were easily converted by the AIM read-in circuitry back to square waves.

The input signals to the recorder was reshaped by integrating the signal using a capacitor. This integration actually produces a round-edge triangular wave, which is close enough to sinusoidal for this application.

more →

## DILINK DILEMMA

**C. M. Shaw**  
**169 Rainbow Dr. NW**  
**Ft. Walton Beach, FL 32548**

When using the Dilink vector, \$A406/A407, and AIM 65 goes off into never-never land, pressing RESET seldom, if ever, returns you to the Monitor unless you do the following:

Prior to changing the Dilink vector, change \$A402 to something other than \$7B.

Now, when you press RESET, line 382 of the Monitor program will detect a cold start condition and will reinitialize the Dilink vector to point to Outdis, \$EF05.

Ideally, your program using the Dilink vector, should re-initialize \$A402 (low byte of NMIV2) and the Dilink vector when re-started to avoid having to reload it.

If you plan to use the STEP/TRACE mode of operation, execute a RESET first to re-initialize Dilink and NMIV2. ⊕

---

The capacitor found to work best was 4.7  $\mu$ f and was soldered directly to the edge connector between the AIM output (pin L) and ground (pin 1).

Installation of this capacitor has several advantages other than reducing false pulses. The circuit is no longer as sensitive to the volume control setting and works well over a much wider range of volume settings. Also, the Y/N test program in Section 9.1.4 of the User's Guide works well, which it did not do before.

It appears that this simple addition of an integrating capacitor will help solve many tape read back problems.

(EDITOR'S NOTE: This method solved the problem one AIM 65 user was having trying to read KIM-1 tapes.) ⊕



# INPUT/OUTPUT DEBUG ON THE AIM 65/40

**Jim Thompson**  
**Rockwell International**

Trying to debug a program which transmits data to or from an external device is sometimes very difficult. This may be due to the effort required to access the data or the data may even be lost due to program malfunction. To aid in tracking this data transfer, the following programs were created to copy into memory each byte as it is transferred. The following description of operation is valid for either the input or output routines.

Locate the address of the input (output) vector of the device to be traced in the I/O vector table located at \$0200.

For the device "S" \$0204 (\$0206)

Put this address into the instructions located at \$71C (\$740) and \$721 (\$745).

```
{M}071C  8D FE FF A9 07 8D FF FF .....
{/}071C      04 02          05 02
```

Using this address obtain the vector of the device JMP table.

```
{M}0204  62 F0 8B F0 56 F0 9D F0 b...V...
```

Now using this vector, display the device JMP table.

```
{M}F062  4C 6E F0 4C 63 F9 4C 6E Ln.Lc.Ln
{ }F06A  F0 4C 5E F5 18 60 4C 17 .L . . 'L.
```

Copy the operand of the first JMP into the JMP to OPEN at \$74A (\$753).

```
{M}074A  4C FF FF 4C 00 07 4C FF L. . L. . L.
{/}074A      6E F0
```

Next copy the operand of the second JMP into the subroutine call at \$700 (\$726).

```
{M}0700  20 FF FF 8D FF FF 08 EE .....
{/}0700      63 F9
```

And finally, copy the operand of the third JMP into the JMP to CLOSE at \$750 (\$759).

```
{M}0750  4C FF FF 4C FF FF 4C 26 L. . L. . L&
{/}0750      6E F0
```

When you are ready to begin the copy process, execute the program located at \$711 (\$735). This will ask you for the starting address of the copy buffer and will link the trace program into the MONITOR. A COLD RESET is required to restore normal operation. Now get out there and remove all of those nasty I/O BUGS.

```
0726  8D FF FF  TRACOT STA MEMORY
0729  EE 27 07          INC TRACOT+1      ; STEP TO NEXT CELL
072C  D0 03          BNE TRAC01
072E  EE 28 07          INC TRACOT+2
0731  28          TRAC01 PLP
0732  4C FF FF          JMP PUT          ; SEND BYTE TO OUTPUT DEVICE

0735  20 35 AE  SETOUT JSR FROMX          ; GET ADDRESS OF COPY MEMORY
0738  8E 27 07          STX TRACOT+1      ; SET COPY ADDRESS
073B  8C 28 07          STY TRACOT+2
073E  A9 53          LDA #<TABOUT
0740  8D FE FF          STA OUTVEC
0743  A9 07          LDA #>TABOUT
0745  8D FF FF          STA OUTVEC+1
0748  00          BRK
0749  EA          NOP
```



```

AE35=          FROMX  = $AE35
FFFF=          GET    = $FFFF
FFFF=          PUT    = $FFFF
FFFF=          MEMORY = $FFFF
FFFE=          INVEC  = $FFFE
FFFE=          OUTVEC = $FFFE

0000           *=$700
0700  20 FF FF  TRACIN JSR GET          ; GET A BYTE FROM THE INPUT DEVICE
0703  8D FF FF  TIN    STA MEMORY      ; ...NOW COPY IT INTO MEMORY
0706  0B                PHP
0707  EE 04 07                INC TIN+1      ; STEP TO NEXT CELL
070A  D0 03                BNE TINXT
070C  EE 05 07                INC TIN+2
070F  2B                TINXT PLP
0710  60                RTS

0711  20 35 AE  SETIN  JSR FROMX        ; GET ADDRESS OF COPY MEMORY
0714  8E 04 07                STX TIN+1      ; SET STORE MEMORY ADDRESS
0717  8C 05 07                STY TIN+2
071A  A9 4A                LDA #<TABIN      ; SET INPUT VECTOR TO COPY JMP
071C  8D FE FF                STA INVEC
071F  A9 07                LDA #>TABIN
0721  8D FF FF                STA INVEC+1
0724  00                BRK
0725  EA                NOP

FFFF=          OUTPUT = $FFFF
FFFF=          INPUT  = $FFFF
FFFF=          OPEN   = $FFFF
FFFF=          CLOSE  = $FFFF

074A  4C FF FF  TABIN  JMP OPEN
074D  4C 00 07                JMP TRACIN
0750  4C FF FF                JMP CLOSE

0753  4C FF FF  TABOUT JMP OPEN
0756  4C 26 07                JMP TRACOT
0759  4C FF FF                JMP CLOSE

075C                      . END

```

## ADVENTURE!!!

**Michael J. Thunquest**  
**1067 East Austin Ave.**  
**Salt Lake City, Utah 84106**

*(EDITOR'S NOTE: This is really a fun game for you lunch time adventurers! I was amazed at how challenging it was for so small a game. No, I haven't gotten through the whole game yet. For all you folks who don't look forward to typing the program in, Mike is making tapes available—Send him a S.A.S.E. for price information.)*

Now the exciting adventure series comes to 4K Aim-65 in BASIC! This mini-version of those exciting games created by Scott Adams provides all the fascination and thrill of their "father" programs, but without their gigantic and confusing data files. This game is so action packed that there isn't even room in the program for directions! So here they are (very simple anyway).

At the beginning of the game you have been thrown, by forces beyond your control, into a dark underground cavern with tunnels leading to other rooms (5 total). These rooms contain odd pieces of equipment which will definitely come in very handy to you. The object of the game is to escape from the caves (using the tools you discover) carrying the precious treasures hidden there. The fewer the moves it takes you to accomplish this, the closer to a perfect score you will attain.

Use the commands E, W, N, S as directions for moving from cave to cave, otherwise use 2-word commands (a verb and a noun) to accomplish your tasks. If you type 'look' you will be shown again the room in which you reside.

If you are typing the program in by hand be sure to type it exactly as shown (including trailing spaces) to assure proper printout when playing. As soon as you have typed 'RUN' the game has begun. Try different commands as though you were really in that situation. You'll get the hang of it quite fast even if you've never been exposed to the Adventure games. Good Luck!

```

1 DIMO(12):O(2)=1:O(3)=1:O(5)=2:O(6)=2:O(1)=2:O(4)=3
3 DATA"SEE",1,"BOT",2,"WAN",3,"ROC",4,"LAN",5,"WAT",6,"GOL",7
4 O(10)=5:R=3:GOSUB37
5 DATA"SIL",9,"SAN",10,"DIA",11,"VEN",15,"FIS",16
6 DATA"PLA",18,"STE",19
8 DATA"E",1,"W",2,"N",3,"S",4,"FOL",12,"POU",6
9 DATA"CRO",12,"CLO",11
10 DATA"GET",5,"DRQ",6,"THR",6,"FIL",13,"EMP",6,"PLA",6,"WAV",8
11 DATA"WAT",14,"CLI",9,"LOO",10,"PLU",11,"FIN",12,"JUM",12
12 S=0:F=0:B$="":C$="":M=M+1:INPUTA$
14 FORX=1TOLEN(A$):IFMID$(A$,X,1)<>" "THEN17
16 B$=LEFT$(A$,X-1):C$=RIGHT$(A$,LEN(A$)-X)
17 NEXTX:IFB$=""THENB$=A$:C$=""
19 Y$=LEFT$(B$,3):Z$=LEFT$(C$,3)
20 FORX=1TO14:READD$,D:IFD$=Z$THENS=D
22 NEXTX
24 FORX=1TO21:READD$,D:IFD$=Y$THENF=D:RESTORE:GOTO30
25 NEXTX:PRINT"YOU CANT ";A$:RESTORE:GOTO12
28 PRINT"YOU CANT ";A$:RESTORE:GOTO12
30 IFF>7THENF=F-7:GOTO34
32 ONFGOSUB77,83,87,92,100,135
33 GOTO12
34 ONFGOSUB220,250,265,290,275,280,285
36 GOTO12
37 ONRGOTO38,40,41,43,39
38 PRINT"THIS IS THE PIRTAES ROOM":GOTO49
39 PRINT"YOU'RE IN THE MYSTERYROOM":GOTO320
40 PRINT"YOU ARE AT A POOL OFWATER":GOTO49
41 PRINT"AN ESCAPE HOLE IS HIGH ABOVE YOU":GOTO49
43 IFC(3)=0THEN46
45 PRINT"THIS IS A LARGE ROOM":GOTO49
46 PRINT"A VENT IS BLOWING OUT STEAM. YOU CANT SEE ANY";
47 PRINT" OBJECTS IN THE ROOM":RETURN
49 PRINT"THERE IS"

```

```

50 FORX=1TO12:IFD(X)<>RTHEN70
52 IFX>6THENY=X-6:GOTO54
53 ONXGOTO55,56,57,58,59,60
54 ONYGOTO61,62,63,64,65,66
55 PRINT"A SEED":GOTO68
56 PRINT"A BOTTLE":GOTO68
57 PRINT"A MAGIC WAND":GOTO68
58 PRINT"A ROCK":GOTO68
59 PRINT"A LIT LANTERN":GOTO68
60 PRINT"WATER":GOTO68
61 PRINT"GOLD!":GOTO68
63 PRINT"SILVER!":GOTO68
64 PRINT"SAND":GOTO68
65 PRINT"DIAMONDS!":GOTO68
66 PRINT"A HUGE PLANT"
68 L=1
70 NEXTX:IFL=0THENPRINT"NOTHING"
71 L=0:RETURN
72 IFR=3OR0(5)=6OR0(5)=RTHEN37
73 PRINT"ITS PITCH BLACK HERE"
74 PRINT"YOU BETTER GET BACK"
75 INPUTA$:IFRND(1)>.7THENR=2:0(5)=2:GOTO37
76 PRINT"TRY AGAIN":GOTO75
77 IFR<>1THEN79
78 R=2:GOTO72
79 IFR<>4THEN82
80 IFC(1)THENR=3:GOTO72
81 PRINT"A DEEP FISSURE BLOCKS THE WAY":RETURN
82 PRINT"WRONG WAY":RETURN
83 IFR=2THENR=1:GOTO72
84 IFR<>3THEN82
85 IFC(1)THENR=4:GOTO72
86 GOTO81
87 IFR=5THENR=1:GOTO72
88 IFR=3THENR=2:GOTO72
89 IFR<>4THEN82
90 IFC(2)THENPRINT"ROCKS HAVE BLOCKED THE TUNNEL":RETURN
91 R=5:GOTO72
92 IFR<>2THEN95
93 IF0(10)=2THENR=3:GOTO72
94 PRINT"ITS TOO SLICK RIGHT NOW":RETURN
95 IFR=1THENR=5:GOTO72
96 IFR<>5THEN82
97 IFC(2)=0THENR=4:GOTO72
98 GOTO90
100 IFS>11THENPRINT"NO WAY!":RETURN
105 IF0(S)<>RTHENPRINT"I SEE NO ":C$:RETURN
110 IFS=6AND0(2)<>6THENPRINT"YOU HAVE NO BOTTLE":RETURN
115 IF0>2THENPRINT"SORRY 3 IS THE LIMIT":RETURN
120 PRINT"OK":0(S)=6:0=0+1
125 IF0(7)=0ANDS=6THENPRINT"I SEE GOLD!":0(7)=R
130 RETURN
135 IFS>11THEN100
137 IFF=6ANDY$<>"DRO"THENS=6:C$="WATER"
    
```

(continued on next page) —&gt;

## BOARD-LEVEL SEMINARS

Here is an up-to-date schedule of one-day seminars which will cover Rockwell AIM 65, AIM 65/40 and RM 65 product lines. Contact the appropriate person in your area for more information. The fee for the seminar will be \$15 per person.

DATE	LOCATION	ROCKWELL REPRESENTATIVE CONTACT	TELEPHONE NUMBER
5/25/82	OTTAWA, CANADA	MARTY KENT	(416) 494-5445
5/26/82	MONTREAL, CANADA	MARTY KENT	(416) 494-5445
5/27/82	CALGARY, ALBERTA	BILL BISSONNETTE	(403) 483-6266
5/28/82	REGINA, SASKATCHEWAN	BILL BISSONNETTE	(403) 483-6266
6/1/82	SADDLEBROOK, NJ	PETE FERENTINOS	(516) 360-0940
6/2/82	COMMACK, NY	PETE FERENTINOS	(516) 360-0940
6/3/82	RICHMOND, VA	SHARON BULOVA	(703) 534-7200 or (800) 572-0405
6/8/82	CHICAGO, IL	BRAD HERRING	(312) 297-8862
6/9/82	MILWAUKEE, WI	TED CESSOP	(414) 257-2928
6/10/82	MINNEAPOLIS, MN	TW JOHNSON	(612) 544-7404
6/15/82	SEATTLE, WA	KRISTI SELLERS	(206) 454-9699
6/16/82	PORTLAND, OR	KRISTI SELLERS	(206) 454-9699
6/17/82	SUNNYVALE, CA	LARRY ADAMS	(408) 734-9865
6/22/82	HOUSTON, TX	CHUCK DAVIS	(713) 524-0528
6/23/82	DALLAS, TX	DEBORAH ULRICH	(214) 385-8885
6/24/82	PHOENIX, AZ	DON BULLOCK	(602) 971-6250
6/28/82	SAN DIEGO, CA	LOUISE TOUISSANT	(213) 478-0183
6/29/82	LOS ANGELES, CA	LOUISE TOUISSANT	(213) 478-0183
6/30/82	ORANGE COUNTY, CA	LOUISE TOUISSANT	(213) 478-0183

```

140 IF0(S)=6THEN150
145 PRINT"YOU HAVE NO ";C$:RETURN
150 PRINT"OK";0(S)=R:0=0-1:IFS=6THENO(6)=2
152 IFS=2THENPRINT"IT BREAKS":0(2)=0:IF0(6)=6THENO(6)=2:0=0-1
155 IFS<>6ANDS<>1THENRETURN
160 IFS=1THENPRINT"THEY SEEM DRY":RETURN
170 IF 0(1)<>RTHENRETURN
176 PRINT"A HUGE PLANT GROWS TO THE CEILING"
177 0(1)=0:0(6)=2:0(12)=R:RETURN
220 IF0(3)<>6THEN145
222 IFR=3ORR=4THEN245
225 IFC(2)THENPRINT"NO GOOD":RETURN
230 PRINT"THERE IS A LOUD RUM-BLE":C(2)=1:RETURN
245 IFC(1)=0THENPRINT"A BRIDGE APPEARS":C(1)=1:RETURN
246 PRINT"THE BRIDGE VANISHES":C(1)=0:RETURN
250 IF0(12)=3ANDR=3THEN260
255 PRINT"NOWHERE TO GO":RETURN
260 IF0(7)=6AND0(9)=6AND0(11)=6THEN262
261 PRINT"YOU DON'T HAVE ALL THE TREASURE":RETURN

```

more →

## MACROS

### ... for the FORTH Assembler

I'm going to fill you in on a very powerful technique that can be used with the assembler in your AIM 65 FORTH system. I'll bet you didn't know that you could take often used assembly language code sequences and turn them into macros.

Let's look at the CODE sequence on page 12-14 of the AIM 65 Forth User Manual. If you don't have Forth at the moment, here's the routine as it's published:

```
CODE FORMAT XSAVE STX, 8A02 JSR, XSAVE LDX, NEXT JMP,
END-CODE
```

Assume that you have a number of other small code definitions and they all are a machine language subroutine, say on a disk I/O board, and have to save and restore the X register every time (since it's used as the data stack pointer).

We can easily define a macro to save and restore the X register and call a particular subroutine as follows.

#### ASSEMBLER DEFINITIONS

```
: CALL XSAVE STX, JSR,
      XSAVE LDX, ;
```

#### FORTH DEFINITIONS

The ASSEMBLER DEFINITIONS informs the system that you wish to add some new definitions to the assembler vocabulary.

The word CALL when referenced, will save X, do a JSR to whatever subroutine address is on the stack and then restore X when the program returns from the subroutine.

The FORTH DEFINITIONS sequence lets the system know that all further definitions will be compiled into the regular FORTH dictionary.

Now our FORMAT program can be rewritten to take advantage of the CALL macro.

```
CODE FORMAT 8A02 CALL NEXT JMP, END-CODE
```

That really tightens it up, doesn't it? The idea came from Charles Curley, one of the software types here at Rockwell. Quite powerful. This technique can, of course, be used for lots of other things than just a method for calling subroutines. New 6502 op codes can be written (such as CLA—clear Accumulator) and I/O ports can be initialized with one word. The possibilities are endless.

```
262 IF0(10)<>2ANDC(1)=0THEN266
263 PRINT"YOU DIDNT BLOCK THE PIRATE":0(7)=1:0(9)=1:0(11)=1
264 PRINT"TREASURES GONE!":0=0-3:RETURN
265 GOTO37
266 P=1135-M*3:PRINT" ":PRINT"YOU SCORED":P;"/1000":END
275 IFR=10RR=20RY$<>"CRO"ORC(1)=0THENPRINT"NICE TRY":RETURN
276 IFR=4THEN77
277 IFR=3THEN83
280 S=6:C$="WATER":GOTO100
285 S=6:GOTO135
290 IF0(4)=6THEN300
295 PRINT"YOU LACK WHATS NEED-ED":RETURN
300 IFR<>4THEN275
305 PRINT"THE STEAM CLEARS"
310 C(3)=1:0(9)=4:0(11)=4:0=0-1:0(4)=0:GOTO49
320 IF 0(7)=6THEN0(7)=2:0=0-1:PRINT"THE BATS GRAB YOUR GOLD"
325 IFRND(1)>.9THENPRINT"SOMEONE IS WATCHING YOU"
330 GOTO49
```

# COMMAND STRING CREATION FOR THE AIM 65/40

**Jim Thompson**  
**Rockwell International**

The AIM 65/40 monitor command "&" (execute command string) allows the user to repeat a long sequence of commands with a minimum number of key strokes. The creation of a string of command characters from a printed listing may not be easy as the user needs to separate the key strokes from the characters output from the monitor/program. To aid the user, a program has been written to copy into a command string every key stroke used in a program sequence. The creation program is in three parts, initialization of the copy mode, termination of the copy mode, and the copy routine itself.

When the user is ready to start the creation of the string, he should enter the following:

```
{G}700 (CR) FROM=XXXX (CR)
```

All key strokes following this entry will be placed into memory, starting at the address given in reply to the "FROM=" prompt. No test is made on the length of the command string length, so the user should allow sufficient memory for the command string.

To terminate the copy of the key board input in to the command string, enter the following:

```
{G}075A (CR) (the address must be 4 characters)
```

This will restore the key input status to that prior to the enabling of the copy program. The command string may now be executed with the monitor command {&}.

Special operations such as 'MANUAL ENTRY' and 'SELF REPEATING' may be performed. To allow for a 'MANUAL ENTRY' of variable data within the command string (!!!), terminate the copy mode as described above at the point where manual entry is required. Record the address output on the display and then do the manual operation. When ready to resume the copying of the key board entries, execute the command string start program and respond to the prompt "FROM=" with the address saved from the above termination. Now continue with the command entry.

To create a command string which will, when it completes, start back at the beginning (an infinite loop) do the following. When ready to repeat, enter a memory display command of the start of the command string buffer.

```
{M}XXXX (CR)
```

Then do the normal copy mode termination. Record the address displayed. Then use this address minus 8 to display memory {M}. The byte displayed (\$4B) should then be changed to a \$26 ("&"). The string will then be programmed to repeat itself.

```
;LINKS TO SYSTEM
```

```
;
0800          VECTOR = $00FC
0800          IOVTAB = $0200
0800          COMIN  = $A334
0800          CSIO1X = $A6A0
0800          FROMX  = $AE35
0800          BLANK2 = $F377
0800          WRAX   = $F3BA
0800          *=$0700
```

```
; *****
; * ROUTINE TO INITIALIZE THE KEYBOARD
; * COPY AND LINK IT INTO THE SYSTEM
; *****
```

```
;
;SAVE KEY INPUT VECTOR
;
0700 AD 00 02   SETCOP LDA IOVTAB
0703 8D 97 07           STA SYSVEC
0706 85 FC           STA VECTOR
0708 AD 01 02   LDA IOVTAB+1
070B 8D 98 07           STA SYSVEC+1
070E 85 FD           STA VECTOR+1
```

```
;
; COPY THE KEY INPUT JMP TABLE
;
0710 A0 08           LDY #8
0712 B1 FC   COPTAB LDA (VECTOR),Y
0714 99 99 07           STA JMPTAB,Y
0717 88           DEY
0718 10 F8           BPL COPTAB
```

```
;
;SAVE KEY INPUT GET VECTOR
;
071A AD 9D 07           LDA JMPTAB+4
071D 8D 4C 07           STA COPY+1
0720 AD 9E 07           LDA JMPTAB+5
0723 8D 4D 07           STA COPY+2
```

```

;SET GET VECTOR TO COPY ROUTINE
;
0726 A9 4B          LDA #<COPY
0728 8D 9D 07       STA JMPTAB+4
072B A9 07          LDA #>COPY
072D 8D 9E 07       STA JMPTAB+5
;
;GET ADDRESS OF COMMAND STRING BUFFER
;
0730 20 35 AE       JSR FROMX
0733 8E 4F 07       STX SAVE+1
0736 8C 50 07       STY SAVE+2
;
;SET THE FIRST CHARACTER IN THE STRING
;
0739 A9 21          LDA #<!/
073B 20 4E 07       JSR SAVE
;
;SET KEY INPUT VECTOR
;TO THE COPY JMP TABLE
;
073E A9 99          LDA #<JMPTAB
0740 8D 00 02       STA IOVTAB
0743 A9 07          LDA #>JMPTAB
0745 8D 01 02       STA IOVTAB+1
;
;RETURN TO THE MONITOR
;
0748 4C 34 A3       JMP COMIN

;*****
;* KEY COPY ROUTINE
;*****
;
;COPY A KEY TO THE BUFFER
;
074B 20 FF FF COPY  JSR $FFFF
;ADDRESS OF KEY INPUT GET
074E 8D FF FF SAVE  STA $FFFF
;ADDRESS OF BUFFER
0751 EE 4F 07       INC SAVE+1
;STEP TO NEXT CELL
0754 D0 03          BNE COPEXT
0756 EE 50 07       INC SAVE+2
0759 60             COPEXT RTS

```

```

;*****
;* RESTORE NORMAL KEY INPUT AND
;* TERMINATE THE COMMAND STRING
;*****
;
;RESTORE KEY INPUT GET
;
075A AD 97 07 RESTOR LDA SYSVEC
075D 8D 00 02       STA IOVTAB
0760 AD 98 07       LDA SYSVEC+1
0763 8D 01 02       STA IOVTAB+1
;
;REMOVE THE LAST 6 KEYS FROM THE
;STRING
0766 A2 05          LDX #5
0768 AD 4F 07 RESTO1 LDA SAVE+1
076B D0 03          BNE RESTO2
076D CE 50 07       DEC SAVE+2
0770 CE 4F 07 RESTO2 DEC SAVE+1
0773 CA             DEX
0774 10 F2          BPL RESTO1
;
;TERMINATE THE COMMAND STRING
;
0776 A9 21          TERMN8 LDA #<!/
0778 20 4E 07       JSR SAVE
077B 20 4E 07       JSR SAVE
;
;DISPLAY THE LINKING ADDRESS
;
077E 20 77 F3       JSR BLANK2
0781 AD 50 07       LDA SAVE+2
0784 AE 4F 07       LDX SAVE+1
0787 20 BA F3       JSR WRAX
;
;TERMINATE COMMAND STRING FOR POSSIBLE
;EDITOR USAGE
;
078A A9 0D          LDA #13
078C 20 4E 07       JSR SAVE
078F A9 00          LDA #0
0791 20 4E 07       JSR SAVE
0794 4C 34 A3       JMP COMIN

0797               SYSVEC **++2
0799               JMPTAB **++9
07A2               END

```

ERRORS=0000

⊕



## Q&A

### . . . on the R6651 ACIA


(EDITOR'S NOTE: This new column will be presenting the most often asked questions that our applications engineers have heard on certain Rockwell products. If you have a question on one of our products, drop me a line and it may get answered here if we feel it is of general enough interest. This month we thank Randy Dumse and Joe Hance, both of whom are applications engineers, for their help in compiling and answering these questions.)

#### What type of crystal do I need to use with the R6551 ACIA?

To drive just one device, use the following type of crystal: 1.8432 Mhz, series mode, 15pf, 650 ohm series resistance.

#### How do I drive more than one R6551 ACIA device from one crystal?

To drive more than a single ACIA device, you need to build an external crystal oscillator. The crystal just will not drive more than one input.

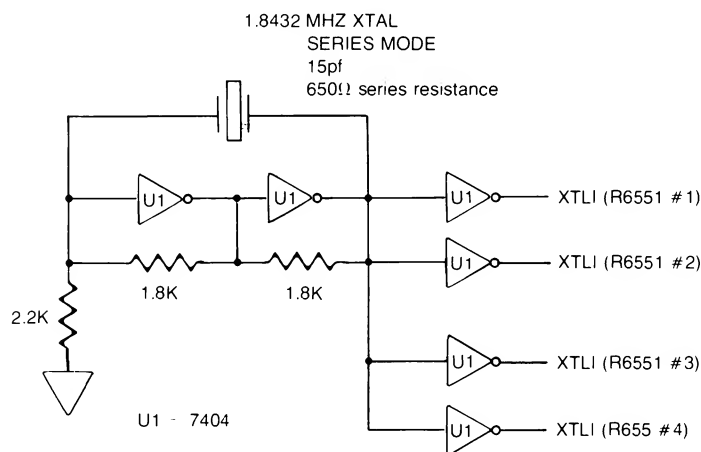

This circuit is identical to the one used on the RM 65 ACIA module and can drive up to two R6551 ACIA devices. To drive more than two XTLI inputs, simply add additional buffering as shown by the dotted lines.

#### If I'm not using the Data Carrier Detect (DCD) or Data Set Ready (DSR) lines in my particular application what should I do with them?

These two lines (DSR and DCD) should be tied to ground if you are not using the R6551 with a modem (or other device which needs these signals).

more →

## VERIFYING A SUCCESSFUL RECORDING

by Dr. Lawrence A. Ezard  
2149 Kentwood Dr.  
Lancaster, PA 17601

After information from the text buffer has been recorded on cassette tape a test should always be made to verify that a successful recording has been obtained and that it will be possible later to read the information from the cassette tape to the text buffer using the text editor commands. The error detection capability during the reading of a file in the search mode operation is used. To test the information on cassette tape the verify procedure is as follows:

1. (a) Rewind the cassette tape and position the tape a couple inches or about five counts before the start of the desired file. This area of the tape should have nothing recorded on it. (Although a voice recording is permissible in this area no AIM-65 recorded data is permitted.)

more →

#### How do I get the ECHO mode on the R6551 ACIA device working properly?

To get the ECHO mode operational, set bits 2 and 3 of command register to 0 and bit 4 of that register to 1. The RTS output line will be low in the ECHO mode.

#### How do I properly initialize the R6551 ACIA device?

The first thing to do is perform a software reset to the R6551. This is done by writing something to the status register location (it doesn't matter what you write since what actually decodes the reset is the proper combination of register select lines and a low on the read/write line).

Next, make sure that bit 0 of the command register is set to 1. This sets the data terminal ready (DTR) line low and permits the ACIA device to function.

Then load the control register with the desired value. The R6551 ACIA is now ready to send and receive.

⊕

- (b) Set the volume control to maximum and the tone control to maximum treble.
2. If remote control operation is being used turn off the cassette tape with the AIM-65 monitor command 1. Set the recorder to PLAY.
3. (a) Re-enter the text editor with the T command. The top line will be displayed and printed.
  - (b) Position the line pointers to the bottom line using the B command. The last line will be displayed and printed.
  - (c) Use the D command to move the line pointer down to the dummy line. The word END will be displayed.
4. The editor command R is now typed to obtain a pseudo read of the cassette tape information into the text buffer.

A non-existent file name, such as DUMMY, will be used so that only a search operation, not a load operation for a file will be obtained.

An example of the above operations is shown with operator entries underlined.

<pre>&lt; &lt;T&gt; TOP LINE =&lt;B&gt; LAST LINE =&lt;D&gt; END =&lt;R&gt; IN=T F=DUMMY T=1</pre>	<p><i>Comment:</i> AIM-65 Monitor prompt Reenter the text editor and display the top line. Move the line pointer to display the last line in the text buffer. Move down one line to the dummy line. The print key was pressed to print this line. Use R command to read multiple lines of text into text buffer. Specify input from cassette tape, filename, and remote control number 1.</p>
--	---

The AIM-65 response to the R command is = <R>, a carriage return in the IN = prompt. The operator types T to indicate the information is coming from cassette tape. AIM-65 responds with the filename prompt F =. The operator types the non-existent filename DUMMY. AIM-65 responds with the tape recorder remote control prompt T =. The operator responds by typing 1 for remote control number 1.

5. The operator now types the RETURN key. If the remote control feature is used this will start the tape recorder. If the remote control feature is not being used the operator should manually start the tape recorder in the play operation mode.
6. (a) Typing the RETURN key initiates the start of a set of instructions which searches for the *start of a file* recorded on the cassette tape.

- (b) *When the first file is found* the search message will be displayed. If the file named PROG/ is read AIM-65 will display

SRCH F=PROG1 BLK=XX

where XX = the block count. The block count will change as the tape reading continues.

- (c) If there are any errors found in the tape recording as the search operation proceeds an error message will be displayed.
  - (d) If the displayed block count is the last block count on the file, the displayed block count will not change until a new file is located.
  - (e) If there are no error messages and the last block count is displayed then the tape recording verification operation is complete.
7. If the search message is not displayed as the tape is read, check the following possibilities.
    - (a) Rewind the tape, play the tape, and listen to the tape to be sure that AIM-65 has recorded something on the tape.
    - (b) Try steps 1 to 6 above again. Be sure to set volume and tone controls to maximum.
    - (c) If the tape recorder play operation is started in a section of tape within a file (past the file name information stored on the tape) the search message will not be displayed. Instead, the block count will be displayed as part of the command message until the first file name is read. For example:

IN=T F=DUMMY T=1 XX

where XX is in the block count. The block count may change as the tape play continues.

- (d) If the first record, which contains the file name, was not successfully recorded on the cassette tape the AIM-65 response will be similar to 7(c) above. This can happen if the automatic level control on the tape recorder does not react fast enough at the beginning of the recording. It could also happen if the remote control switch does not close fast enough. In other words AIM-65 sends out the first record to be recorded but the tape recorder does not record the first record properly. One possible remedy is to increase the GAP value at A409 from \$10 to \$40 or \$80. If this does not cure the problem the tape recorder head should be cleaned. And if this doesn't cure the problem a new tape recorder (possibly without automatic level control) should be tried.

## TITLE PAGE PRINTER

C. M. Shaw

169 Rainbow Dr. N.W.

Ft. Walton Beach, FL 32548

For your line printer—

The following program is a 90-degree variation on the Banner Program published on page 15 of Interactive, issue number 2.

```

1000 REM TITLE PAGE PRINTER
1001 REM BY C. M. SHAW 22 DEC 1981
1002 REM DESIGNED FOR 8.5 BY 11 INCH PAPER
1003 REM 80 COLUMNS AND 6 LINES PER INCH
1004 REM END TEXT WITH "END$" IF LESS
1005 REM THAN SIX LINES.
1050 DIM L$(8):L=1
1110 INPUT "HORZ CENTERING?, Y OR N";H$
1120 INPUT "VERT CENTERING? Y OR N";V$
1150 INPUT "TEXT";L$(0)
1200 IF L$(0)="END$" GOTO 1400
1250 IF LEN(L$(0))>13 GOTO 2150
1300 L$(L)=L$(0):L=L+1:IF L=7 GOTO 2200
1350 GOTO 1150
1400 L=L-1
1401 BL=0:IF V$="N" GOTO 1450
1403 AL=L*7:SL=54-AL:BL=INT(SL/(L+1))
1450 PRINT CHR$(5):REM *** ENABLE PRINTER
1500 FOR LP=1 TO L:LN=LEN(L$(LP)):MK=1
1555 IF BL=0 GOTO 1575
1560 FOR LB=1 TO BL:PRINT:NEXT LB
1575 SP=INT(((13-LN)*6)/2)
1600 FOR R=1 TO 7:IF H$="N" GOTO 1650
1605 IF LN=13 GOTO 1650
1610 FOR PS=1 TO SP:PRINT " ";:NEXT PS
1650 FOR CH=1 TO LN
1700 B=ASC(MID$(L$(LP),CH,1)):IF B>63 THEN B=B-64
1750 CO=62177
1800 FOR CL=1 TO 5:P$=" "
1850 IF (PEEK(B+CO)AND MK) THEN P$="#"
1900 PRINT P$;:CO=CO+64
1950 NEXT CL:PRINT " ";:NEXT CH:PRINT
2000 MK=MK+MK:NEXT R
2050 PRINT:PRINT:NEXT LP
2100 PRINT CHR$(1):END:REM DISABLE PRINTER ***
2150 PRINT "REDO LINE ";L:GOTO 1150
2200 PRINT "FULL, READY TO PRINT?"
2250 GET Q$:IF Q$="Y" GOTO 1400
2300 IF Q$<>"N" GOTO 2250
2350 GOTO 1050

```

## DESIGNER'S COURSE

**The Rockwell R6500 Microcomputer Designer's Course is . . .**

A five-day course. \$695 tuition includes complete documentation package, plus either an AIM 65 microcomputer (with an assembler) or a \$300 discount off current price of a System 65 microcomputer development system.

### R6500 Designer's School

Location	Week of	Location	Week of
Anaheim, CA	May 3	Chicago, IL	June 21
	June 7		August 9
	July 12		October 18
	August 9		December 13
	September 6	Dallas, TX	May 24
	October 4		July 26
Marlton, NJ	November 8		October 4
	December 6		December 6
	May 10		
	July 12		
	September 20		
	November 15		

**The Rockwell PPS-4/1 Microcomputer Designer's Course is . . .**

A five day course. \$625 tuition includes complete documentation package, plus XPO-1 evaluation module. An outline of this course is available upon request.

**TUITION MAY BE PAID BY CHECK, MONEY ORDER, MASTER CHARGE OR VISA CREDIT CARD, OR IT MAY BE BILLED TO YOUR COMPANY.**

### PPS-4/1 Designer's School

Contact School Location

Applications Engineering, D/832	Rockwell International
<b>Rockwell International</b>	5001B Greentree
P.O. Box 3669,	Executive Campus, Rt. 73
Anaheim, CA 92803	Marlton, NJ 08053
PHONE: (714) 632-3860	PHONE: (609) 596-0090
TELEX/TWX: 910 591-1698	TELEX/TWX: 710 940-1377

Rockwell International	Rockwell International
10700 W. Higgins Rd.	Mail Code 417-100
Suite 102	Richardson, TX 75080
Rosemont, IL 60018	PHONE: (214) 996-6500
PHONE: (312) 297-8862	TELEX/TWX: 73307
TELEX/TWX: 910 233-0179	

"We can set up courses at your location"

## AIM 65 PROGRAM EXCHANGE

Here's a good way to help increase the number of AIM 65 programs in the world. Jim Dantin is providing a clearinghouse of software from various sources. Send a S.A.S.E. for his information sheet.

Jim Dantin  
1522 Springdale Dr.  
Owensboro, KY 42301

(Continued from page 3)

converted is determined by the AIM 65 1MHZ  $\phi$ 2 clock. A complete scan through all channels requires 640 clock cycles i.e. scan rate = 1.56KHZ. The -12 to -15 volts power supply for the negative reference may already be available on some AIM systems, if not it must be provided for externally.

Simply reading locations 8000H to 8007H produces conversion data for the 8 analog input channels, for example the program below uses BASIC PEEK instructions to read and display the data from each channel as its corresponding channel number is operated on the keyboard.

```

10 REM=====
20 REM 8 CHAN A/D
21 REM TEST PROG
30 REM  P. TOOMEY
40 REM=====
50 REM
60 REM READS KEYBD
65 REM FOR CHANNEL
70 REM NUMBER AND
80 REM DISP DATA
90 REM A/D ADDRESS
95 REM IS 32768
96 REM
100 GETX$
110 IFX$<"0"THEN175
120 IF X$>"7"THEN175
130 X=VAL(X$)
140 FORDLY=1TO100
141 NEXTDLY
150 PRINT"CHANNEL NO: ";
160 PRINTX;PEEK(32768+X)
170 GOTO 100
175 PRINT"NUMBERS 0-7 PLEASE"
177 PRINT
178 GOTO 100
180 END

```

(Continued from page 2)

Dear Sir,

You may be interested to learn of an application of the AIM-65 to machine tool control. I have three systems running where milling machines are fully controlled in all functions. A BASIC program performs the sorting of machining data while control of stepping motors (acceleration, slew, deceleration) is handled with machine language.

The purpose of this letter is two-fold, one is to give details on recording mixed language programs on tape and the recovery from tape with the minimum of key-strokes. This latter requirement is helpful when relatively unskilled labour is employed to operate the machines.

To dump a mixed programme, proceed as follows:

- 1) Escape to monitor and verify that the BASIC memory limits at 007F and 0080 are below the lowest machine language area.
- 2) Note the BASIC program limits XX, YY at 0075, 0076.
- 3) Start the normal dump procedure and answer the FROM=, TO= prompts as follows—

FROM=	TO=
0	EA
200	YY, XX
a, a	b, b
c, c	d, d      etc.

where a,a-b,b and c,c-d,d are machine language limits.

To load the program from a cold start, it is not necessary to activate BASIC, simply use the normal load procedure, enter BASIC with '6' and start the program with RUN.

This brings me to the second object of this letter to ask, is there a reverse USR function? Or can BASIC be entered and run with a single key stroke when in monitor?

May I add that your magazine has proved a most useful extension of the AIM-65 manuals which in themselves are invaluable.

Yours faithfully,  
W. B. W. Alison  
Alison Instruments  
67 North Quay  
Great Yarmouth  
Norfolk, England  
NR30 1JF

Dear Sir,

I wrote last week giving a method of dumping a mixed machine language/BASIC program, to allow loading without the necessity of first initialising BASIC. I enquired whether there was a method of entering BASIC straight into the run mode without the usual '6' RUN RET sequence.

Here is a method:—

- 1) Find 354 hex bytes RAM, (this can be in the BASIC work area or a file area which is later overwritten) and enter the appended program:—

2000		; INSTANT RUN BASIC
2000		STORE = \$3000
2000		; OR SOME CONVENIENT
2000		; PLACE IN MEMORY.
2000		; THIS CAN BE IN
2000		; THE BASIC WORK AREA
2000		
3300	BA	*=STORE+\$300
3301	86 A0	TSX
3303	A0 00	STX \$A0
3305	84 AA	LDY #0
3307	84 AB	STY \$AA
3309	A9 00	STY \$AB
330B	85 AC	LDA #<STORE
330D	A9 30	STA \$AC
330F	85 AD	LDA #>STORE
3311	B1 AA	STA \$AD
3313	91 AC	LDA (\$AA), Y
3315	C8	STA (\$AC), Y
3316	D0 F9	INY
3318	E6 AD	BNE PAGE
331A	E6 AB	INC \$AD
331C	A5 AB	INC \$AB
331E	C9 03	LDA \$AB
3320	D0 EF	CMP #3
3322	A9 4C	BNE PAGE
3324	8D 0F 01	LDA ##4C
3327	A9 32	STA \$10F
3329	8D 10 01	LDA #<RESET
332C	A9 33	STA \$110
332E	8D 11 01	LDA #>RESET
3331	00	STA \$111
3332		BRK

more 

```

3332 A9 00      RESET LDA #<STORE
3334 85 AC      STA $AC
3336 A9 30      LDA #>STORE
3338 85 AD      STA $AD
333A A0 00      LDY #0
333C 84 AA      STY $AA
333E B1 AC      RETN  LDA ($AC),Y
3340 91 AA      STA ($AA),Y
3342 C8        INY
3343 D0 F9      BNE RETN
3345 E6 AB      INC $AB
3347 E6 AD      INC $AD
3349 A5 AB      LDA $AB
334B C9 03      CMP #3
334D D0 EF      BNE RETN
334F A6 A0      LDX $A0
3351 9A        TXS
3352 60        RTS
3353

```

Dear Editor:

After configuring our AIM-65 for current loop operation with a CRT, it was frequently necessary to switch back to the AIM keyboard, via the KB/TTY switch (S3), to obtain print-out on the AIM printer. This method of change-over soon became even more inconvenient with the addition of a new plastic case which made the KB/TTY switch nearly inaccessible. Our solution was to configure the AIM for software control of this switch.

The KB/TTY switch is a simple single-pole switch which either grounds pin 13 of Z32 (an R6522 VIA) for TTY operation, or lets this pin float high for the standard KB operation. What we did was to attach one end of a 560 ohm resistor to the PB0 pin of the applications connector (pin 9 of J1) and connect the other end, via a clip lead, to the upper contact of the KB/TTY switch (the one closest to the printer) which connects to Z32. If the KB/TTY switch is left open (KB), the status of bit PB0 will control the KB/TTY operation. The 560 ohm resistor protects PB0 if the KB/TTY switch is closed.

When the AIM is turned on, port B comes up as an input port, so that PB0 is high and the KB is selected. If PB0 is configured as an output and forced low, the CRT is selected. Although this can be done in any programming language, we have done it with the two FORTH words CRT and AIM shown below.

: CRT	: AIM
( SWITCHES CONTROL)	( RETURNS CONTROL)
( TO TTY AND SETS)	( TO AIM KB AND)
( BAUD RATE AT)	( PRINTER)
( 2400)	HEX
HEX	FF A002 C!
960 BAUD	FF A000 C! ;
FF A002 C!	
00 A000 C! ;	

The word CRT sets the baud rate, sets port B as an output port by loading its Data Direction Register (DDR) with ones, and sets PB0 to low. The baud rate, which is 960 hex (2400 decimal) in the example, may be adjusted by altering the number preceeding BAUD. The AIM word confirms the DDR data and sets PB0 high. If the other bits of port B are to be used for other purposes, these words should be rewritten accordingly to "OR" in the PB0 data.

Sincerely yours,  
D. M. Gualtieri, and J. F. Ankner  
Allied Corporation  
Corporate Technology  
P.O. Box 1021R  
Morristown, New Jersey 07960

- 2) Enter BASIC and make the direct command POKE 4, N : POKE 5, M : A = USR(0) : GOTO S where M and N are the pointers to the start of the new machine sub-routine (0 and 51 in the program attached) S is the first line number of your program.

- 3) Running halts at the BRK point and the program is now dumped as follows:—

```

Sections  0—3
          10F—111
          300—YY XX

```

Your original machine language areas.

The new machine language area.

YY,XX is the BASIC program limit found at pointers 76,75. If YY,XX is less 300 then this section is omitted.

- 4) When the program is loaded there is no need to initialise BASIC, simply load in the usual way, on completion key F2, when your program immediately starts. (The symbol <|> appears on the first line).

You may be interested in a couple of snapshots of AIM65 controlled CNC machine tools.

Yours faithfully,  
W. B. Alison

more —→

Dear Sir:

The article by Mr. Ward in issue #7 of Interactive (p. 24), describing fast loading of Basic Programs via a machine language dump contains several problems. Be assured it will work, but it records many extra bytes that are not needed and which slow down the ultimate process of loading the program.

In the method espoused by Mr. Ward, he advocated recording of the entire zero page and the entire memory area allocated to Basic. As not all of the allocated area of Basic is ever used for storage of the program, and only a few bytes on zero page are used for Basic, this procedure can incur a dramatic increase in the number of blocks it takes to save a program to tape (thus resulting in a slower loading of the program than could be achieved). A better procedure is to exit to the monitor and examine memory locations 0073 to 0076 which contain in least significant/most significant order the start of Basic (0073, 0074) and the end of the Basic Program (0075, 0076). Now dump, in machine language format, locations 0073 to 007E which locations contain all the needed Basic pointers. The AIM will ask if you have more to dump at which point you instruct it to dump from the start of Basic (obtained in locations 73 and 74) to the end of the Basic Program (from locations 75 and 76). The computer now dumps only the Basic Program to tape and no unnecessary blocks are dumped.

To read back in the program enter and initialize Basic then exit to the monitor. Load the program with the "L" command and when finished loading type "G" and "RUN" and you are up and running your Basic Program. This method of loading and saving Basic programs can save up to 25% or more time than Mr. Ward's method.

I hope this improvement is found useful by the readership.

Sincerely,  
John S. Wahlquist  
1643 N. Formosa Ave., #4  
Los Angeles, CA 90046

Dear Sirs,

I hope that the following little routine will be useful for AIM 65 users. This routine converts a 4-digit (Hex) binary number in its BCD representation, in a format convenient for output via the monitor output routines. If BCDBUF and HEXBUF are located in 0-page, it is fully relocatable and is only 31 bytes long.

```

                                LDA #0
                                LDX #2
CLEAR    STA BCDBUF,X ;clear BCD buffer (3 bytes)
                                DEX
                                BPL CLEAR
                                SED                ;set Decimal Mode
                                LDY #16             ;load number of bits
NEXT     LDX #2                ;load number of BCD bytes -1
                                ROL HEXBUF+1 ;shift left Hex number

```

```

                                ROL HEXBUF        ;and load carry with MSB
ADDEC    LDA BCDBUF,X
                                ADC BCDBUF,X ;add BCD buffer to itself . . .
                                STA BCDBUF,X ;. . . including carry
                                DEX
                                BPL ADDEC
                                DEY                ;Hex buffer scanning complete?
                                BNE NEXT           ;no, push out next bit
                                BRK                ;yes, conversion complete

```

This algorithm, well known by computer people, operates on a very simple basis: The BCD buffer is originally reset to all 0s, then the bits in the Hex buffer are shifted into the carry flag, sequentially, MSB first. At each iteration the BCD buffer is added to itself, IN DECIMAL, including the carry, that will be 0 or 1 according to the bit pushed out of the Hex buffer. In the next iteration the MSB of the Hex buffer, now part of the BCD buffer, will then be multiplied by 2, and the bit immediately following it in the Hex buffer will be added to the BCD buffer as is. At the end of the procedure, the MSB of the Hex buffer will have been multiplied by two 15 times, or by  $2^{15}$  the bit following it by  $2^{14}$  and so on, down to the LSB of the Hex buffer, that will have simply been added to the BCD buffer in the last iteration. This way every bit in the Hex buffer is multiplied by its own weight, but in decimal. This routine is especially useful in real-time control systems because of its fixed execution time.

Faithfully yours,  
Antonio Silva M.S.E.E., P.E.  
Via Anguissola 23 Milano 20146  
Italy

Dear Eric,

Thanks again for all the great work you do for us AIM owners. I have had much character building trying to get the TTY Output program (INTERACTIVE No. 5, p. 13) to run.

Here are the three problems I've had:

- 1) It would have been helpful to say the source code should be assembled on tape first. The article only told me what NOT to do.
- 2) CR = \$8D NOT \$0D
- 3) The location of the code means an automatic crash when BASIC is initialized because memory locations \$200 are changed by BASIC. It is much better to locate the machine language subroutine at the upper end of memory i.e. \$FD0. Then when BASIC is brought up memory is limited to 3534 for a 4K AIM. (4096-530-32 = 3534)

Yours sincerely,  
Robert P. Barrett  
Asst. Prof. of Engineering  
and Computer Science.





## A NEW CASE FOR AIM 65

Thought you'd be interested in seeing the new case/power supply combination that is now available.

The enclosure's ABS plastic top has a fine textured, non-reflective brown finish. The aluminum base includes mounting brackets for the AIM 65 and power supply, as well as line cord and circuit breaker. The enclosure measures 13" x 15.5" x 3.9".

The enclosure also includes an on/off switch, a pushbutton reset switch which mates with the AIM 65 reset switch, and is pre-wired with internal AC lines. Removable plugs in the cover allow access to the AIM 65 run/single step and KB/TTY switches. An external holder for the thermal

printer's paper supply allows easy paper replacement without cover removal.

The regulated power supply which is supplied only with the enclosure provides +5V at 3 amperes and +24V at 0.5 amperes.

The enclosure with power supply, Model A65-006, has a retail list price of \$165. Without the power supply, Model A65-002, the enclosure is \$95. Quantity discounts are offered.

The new enclosure is available through Hamilton-Avnet and all other franchised AIM 65 distributors as well as many computer store dealers worldwide.

# AIM 65 SPARE PARTS LIST

(EDITOR'S NOTE: This is an abbreviated spare parts list.  
For a complete list of spare parts, see our OEM price list.)

Retail Price	Part Number	Description
\$ 74.70	208R02-001	Thermal Printer
13.00	208R02-010	Print Head, Thermal Printer
29.25 /per segment	210R12-001	Display, Module (Intensity Code A, B, C, D, E)
5.00	29650N30-001	Manual, R6500 Programming
5.00	29650N31-001	Manual, R6500 Hardware
5.00	29650N36-001	Manual, AIM 65 USER's
5.00	29650N36-002	Manual, Monitor Program Listing
1.00	29650N50-001	Reference Card
1.00	29650N51-001	Summary Card
73.80	322R04-001	Keyboard Assembly, 54 Key
3.50 /box of 3	55201-001 (TT270)	Thermal Printing Paper (10+ boxes, \$1.75 per box)
7.50	PA00-D020-001	Cable Assembly, 16 Conductor, AIM 65
3.85	PA00-D124-003	Filter, Display Assembly, AIM 65
2.00	PA00-D125-001	Shield, Static
1.50	PA00-D134-001	Tear Bar, Printer Paper
73.00	PA00-D200-001	Master Board Assembly (No Printer—No Display—No MOS) Soldered Components only with exchange of defective board
5.00	R2114-11	RAM
35.45	R3222-11	ROM, Monitor
35.45	R3223-11	ROM, Monitor
35.00	R3224-11	ROM, Assembler
32.50	R3225-11	ROM, Basic #2
32.50	R3226-11	ROM, Basic #1
35.00	R3298-12	ROM, PL/65 #1
35.00	R3299-11	ROM, PL/65 #2
32.50	R32J1-11	ROM, Forth #2
32.50	R32J2-11	ROM, Forth #1
6.95	R6502-11	CPU-Microprocessor
4.00	R6520-11	PIA, 40 PIN DIP
6.20	R6522-11	VIA
8.55	R6532-11	RIOT
200.00	A65-003	Service Test Board, AIM 65

• Minimum Retail Order \$10.00  
F.O.B.-El Paso, Texas

† Include State Tax  
Include \$2.00 Handling Charge

NOTE: OTHER PARTS ARE AVAILABLE: For information call **714/632-2190 Anaheim, California or**  
**800/351-6018 El Paso, Texas**

NEWSLETTER EDITOR  
ROCKWELL INTERNATIONAL  
P.O. Box "C"  
4311 Jamboree Rd.  
Newport Beach, CA 92660

Bulk Rate  
U.S. POSTAGE  
RATE  
Santa Ana Calif.  
PERMIT NO. 15

I.L.

ROBERT CHARLES HOWARD PHD  
TECHNICAL CONSULTANT  
1234 SO FIRST AVE  
ARCADIA, CA

91006